



ABACO MACHINES USA, INC. (EAST COAST OPERATION)

505 Edwards Court Newport News, VA 23608

> Tel: 757-877-5243 Fax: 757-877-5863

Email: <a href="mailto:sales@abacomachines.com">sales@abacomachines.com</a>
Website: <a href="mailto:www.abacomachines.com">www.abacomachines.com</a>

ABACO MACHINES USA, INC. (WEST COAST OPERATION)

20224 S. Normandie Ave. Torrance, CA 90502

> Tel: 310-532-0366 Fax: 310-532-0499

Email: <a href="mailto:sales@abacomachines.com">sales@abacomachines.com</a>
Website: <a href="mailto:www.abacomachines.com">www.abacomachines.com</a>

ABACO MACHINES INTERNATIONAL

Unit 4/34-36 Fairfield Street Fairfield N.S.W. 2163 Australia

Tel: 61-2-9632-4990 Fax: 61-2-9632-1510

Email: <a href="mailto:abaco.com.au">abaco.com.au</a>
Website: www.abaco.com.au

- .. Auto Lock
- Fully Vulcanized Rubber Pads (Rubber Pads Last Longer)
- All Natural Rubber For a Better Grip
- No Slippage
- Protected Rubber Across Jaws That Prevents Chipping
- Swivel Shackle
- .. Replacement Pads Available


# **SPECIFICATIONS:**


Grip Range: 3/8 - 4" (10-105mm)

Work Load: 1650 lbs (750kg)

Weight: 46 lbs (21kg)

Dimensions: 21¼ x 15¾ x 7" (540 x 390 x 180mm)

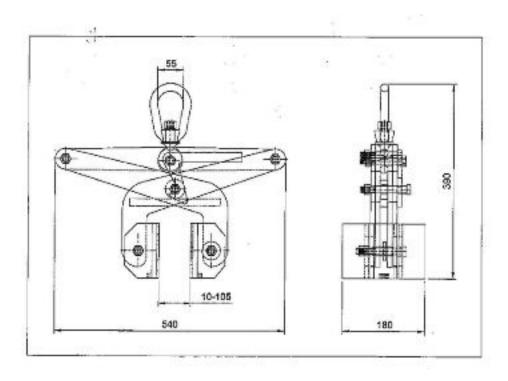

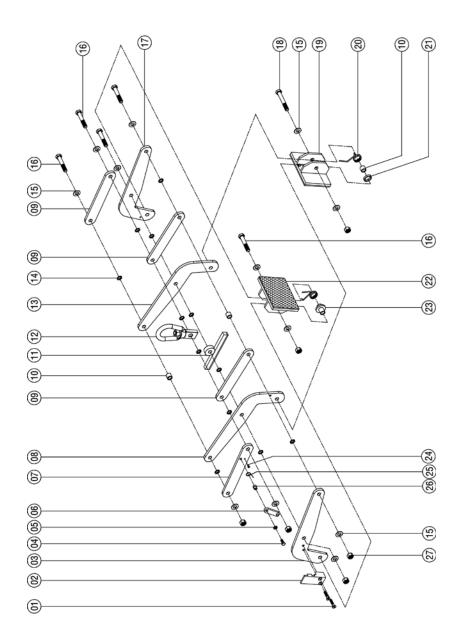

# SPARE PARTS LIST

PART No	DESCRIPTION	QIY	PART No	DE
10	Alan Key Socket Head M14 x 90	0.5	12	Left Hand Si
02	Alu. Washer Ø14 x Ø20 x 0.8	14	13	Swivel Shac
03	Locking Latch	10	14	Spacer Ø14
\$	Alan Key Socket Head M14 x 80	03	15	Lower Arm
0.5	Spacer Ø14 x Ø16 x 16	01	16	Nut M14
90	Washer Ø14 x Ø30 x 1.5	10	17	Lower Arm
70	Lower Arm 07	10	18	Right Hand
90	Alan Key Socket Head M6 x 10	10	19	Spacer
60	Upper Arm 09	10	20	Torsion Spri
10	Upper Arm 10	60	21	Washer Ø26
=	Stopper	-01	.22	Alan Key So

DESCRIPTION	QIV	PART No	DESCRIPTION	QIY
ey Socket Head M14 x 90	02	12	Left Hand Side Jaw	6
asher Ø14 x Ø20 x 0.8	14	13	Swivel Shackle	10
Latch	10	14	Spacer Ø14 x Ø24 x 17	03
y Socket Head MI4 x 80	03	15	Lower Arm 15	02
314 x Ø16 x 16	01	16	Nut M14	90
Ø14 x Ø30 x 1.5	10	17	Lower Arm 17	10
Атт 07	10	18	Right Hand Side Jaw	10
sy Socket Head M6 x 10	10	19	Spacer	10
rm 09	10	20	Torsion Spring	02
trm 10	60	21	Washer Ø26 x Ø30 x 4	10
	10	.22	Alan Key Socket Head M14 x 100	10

# **WARRANTY CERTIFICATE**

In order to validate the warranty, it is mandatory to return the attached Warranty Certificate, duly completed, within eight (8) days after purchase along with a copy of the receipt or the Bill of Sale.

# PERIOD

The warranty starts from the date of purchase on the receipt and is valid for six (6) months. Please remember to include a copy of your receipt when sending in the Warranty Certificate.

### **LIMITATIONS**

This warranty is limited to the replacement of parts recognized as defective by Abaco Machines excluding worn components and consumables. The manufacturer is not responsible for any direct or non-direct, material or immaterial damages caused to persons or property by failure of the machine or the non-operation of the machine.

# CONDITIONS

To benefit from the warranty, it is mandatory to return the attached Warranty Certificate, duly completed, within eight (8) days after purchase along with a copy of the receipt or Bill of Sale.

# **EXCLUSIONS**

Warranty does not apply to damages or failures caused by:

- Incorrect use, misuse, error in transportation, handling, or maintenance on the user's end.
- Use of non-genuine parts or accessories.
- Use of incorrect specifications.

# **HOW TO CLAIM**

During the warranty period, if the product is discovered to be defective, please contact the retailer where you purchased the product first for review and evaluation. The retailer will inform you of the appropriate method of dealing with your claim and advise you of your nearest approved service center.